MIGHTY 600







Item# F-MTY600

600 lb weight capacity Up to 14" deck to water

The new Mighty Lifts are UL Certified, ADA compliant lifts designed to provide versatility and accessibility solutions with greater water drafts and setbacks up to 44 inches.

The Mighty series features an adjustable height seat pole allowing 4" of additional adjustment in 2" increments.

In addition the Mightys' can rotate 360 degrees in either direction. Designed for in ground anchoring, the Mighty series will accommodate existing "standard" Scout 2 and Revolution concrete anchors. Created for its adaptability, the Mightys' can be purchased with a pedestal for additional wall clearance or unusual gutter profiles. Pedestals come in 1', 2', 3', and 4' options.

The Mighty series ideal for is easy and affordable ADA compliance. US Patent Pending.

All lifts come standard in white with blue seat and footrest. Additional color options are available for both plastics and powder coat.

pedestal accessory

FEATURES:

- UL certified
- 600 LB weight capacity
- Up to 14" deck to water
- 360 degree rotation
- · Setback up to 44"
- Adjustable seat height
- Direct drive rotation
- Flip-up armrests
- Stainless steel construction
- Durable powder coat finish
- Five year pro-rated electronics warranty
- Five year structural warranty



ACCENT COLORS

Available in a variety of accent and powder coat colors





*Blue seat standard (not a powder coat option)

OPTIONS/ACCESSORIES:


F-808SA Anchor kit, standard 1.9" ID x 6" deep F-808SA-10 Anchor, 10" for pavers Anchor, Semi-Recessed, Shallow Concrete F-77SSA F-MTLC Cover, standard, blue F-MTLC-T Cover, standard, tan F-MTLC-G Cover, standard, gray F-422PLH-2 Headrest F-LRB Pull-out leg rest assembly (blue, tan, gray,

or white) F-048SCH Solar charging station F-MTTC Mighty series transport cart F-MTY1PD Pedestal, 1 foot tall Pedestal, 2 foot tall F-MTY2PD

F-MTY3PD Pedestal, 3 foot tall F-MTY4PD Pedestal, 4 foot tall

PROUDLY SOLD BY:


THE MIGHTY 600 POOL LIFT

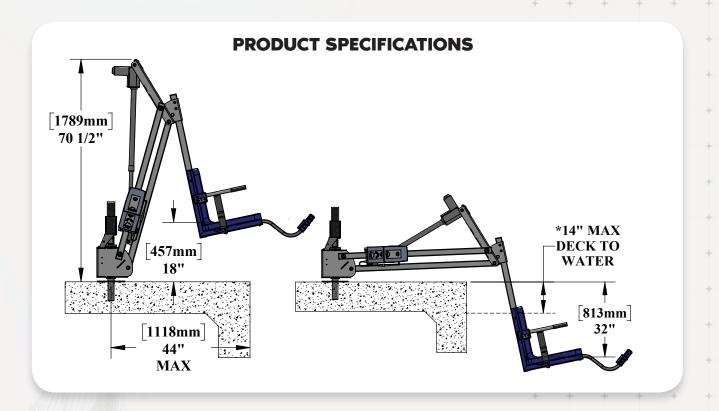


APPLICABLE POOL PROFILES

WITHOUT PEDESTAL

ROLL OUT



PARTIALLY RECESSED



FULLY RECESSED



BULL NOSE




WITH PEDESTAL

RAISED POOL/SPA



FLORIDA ROLL OUT



PARTIALLY RECESSED W/ CURB



To confirm specific application go to www.aquacreek.com for our Pool Lift Selector

Become a member of our new Dealer and Architect page. Access to CAD blocks,

CSI specs and sales materials.

